

Expandable Digital Cordless Answering System

Model No. **KX-TG6440**

 
This model includes:

- a base unit with four handsets: Model No. KX-TG6444 (Handset's Part No.: KX-TGA641)
- one handset (Part No.: KX-TGA740)

The instructions for all units supplied here are contained in the operating instructions of the KX-TG6444.

Please read the operating instructions before using these units.

Product information

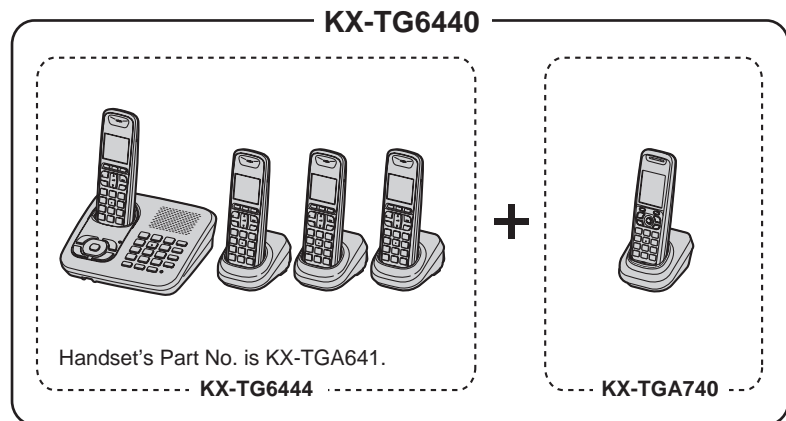

Note:

- The handsets have been pre-registered to work with the base unit.

Model No.	Base unit	Handset	
	Part No.	Part No.	Quantity
KX-TG6440	KX-TG6441	KX-TGA641	4
		KX-TGA740	1

Accessory information

Supplied accessories


No.	Accessory item/Order number	Quantity
①	AC adaptor/PQLV219Z	5
②	Telephone line cord/PQJA10075Z	1
③	Wall mounting adaptor/PNKL1010Z1	1
④	Rechargeable batteries/HHR-4DPA (Part No. HHR-65AAABU or N4DHYYY00002)	10
⑤	Handset cover ^{*1} / PNYNTGA641SR (Pearl silver)	1
	PNYNTGA641TR (Black metallic)	4
⑥	Belt clip/ PNKE1029Z1 (Black metallic)	4
	PNKE1029Z2 (Pearl silver)	1
⑦	Charger PNWETG6432T (KX-TGA641: Black metallic)	2
	PNWETG6440S (KX-TGA641: Pearl silver)	1
	PNWETG7432B (KX-TGA740: Black)	1

*1 The handset cover comes attached to the handset.

Controls

See “Controls” in the operating instructions of the KX-TG6444 product.

 KX-TGA740 handset

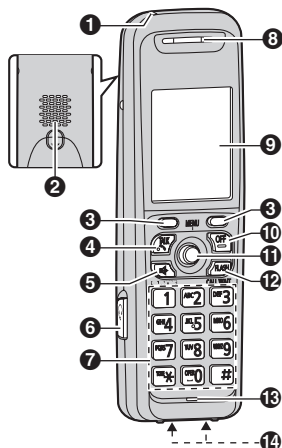

- ❶ Charge indicator
Ringer indicator
Message indicator
- ❷ Speaker
- ❸ Soft keys
- ❹ [TALK]
- ❺ [SP-PHONE: Speakerphone]
- ❻ Headset jack
- ❼ Dial keypad ([*]: TONE)
- ❽ Receiver
- ❾ Display
- ❿ [OFF]
- ⓫ Joystick
- ⓬ [FLASH] [CALL WAIT]
- ⓭ Microphone
- ⓮ Charge contacts

For KX-TGA740 handset feature overview

Main feature differences


Feature	KX-TGA740	KX-TGA641
Display size	2.1 inches	1.8 inches
Control type (page 4)	3 soft keys (Middle soft key: Center of joystick)	3 soft keys
	Joystick (Up/down/left/right)	Navigator key/ △ (Volume) key(Up/down)
Display mode (page 5)	●	—
Message list (page 5)	●	—

Note:


- For some features, the operations are slightly different from the descriptions in the operating instructions (page 6).

Control type

 ■ KX-TGA740

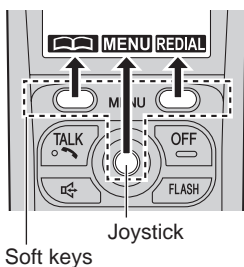

■ KX-TGA641

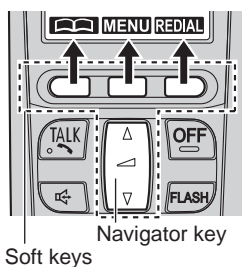 

Function	KX-TGA740	KX-TGA641
Using soft keys	Left, center of joystick ^{*1} , right	Left, middle, right
Scrolling through various lists or items	[▼]/[▲] ^{*2}	[▼]/[▲]
Adjusting the receiver or speaker volume: – while talking – while listening to messages	[▼]/[▲] ^{*2}	[▼]/[▲]
Moving the cursor (right or left) to edit number or name	[▶]/[◀] ^{*3}	[▼]/[▲]
Skipping or repeating during message playback	[▶]/[◀] ^{*4}	—

^{*1} Pressing down the center of the joystick.

^{*2} Pushing the joystick down or up.

^{*3} Pushing the joystick right or left.



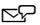
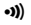
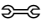

^{*4} To skip messages, push the joystick right.
To repeat messages, push the joystick left.

Display mode

You can select to display either a single item or multiple items on one screen at a time for the following features:

- menu list, phonebook list, caller list, redial list, message list, and call block list
- handset top menu icons in function menu

The following icons are shown when you press down on the center of the joystick in standby mode.

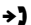Icon	Feature
	Caller list
	Answering device
	V.M. access
	Intercom
	Initial setting
	Customer support

The display mode can be switched temporarily or set by programming.

■ Switching temporarily:

You can temporarily switch the display mode as follows by pressing the right soft key shown when viewing the lists or selecting menu icons:

- **[MULTI]**: Multiple entries/all menu icons are shown on one screen at a time.
- **[SINGLE]**: An entry/a menu icon is shown on one screen in large characters at a time.

Note:

- When **"Multi items"** is selected as the display mode, you can switch the screen to confirm the detailed information by pressing **[SINGLE]**.

■ By programming:

You can set the unit to always show a single item or multiple items beforehand by selecting **"Single item"** or **"Multi items"** as the display mode setting.

Select the desired setting:

- **"Multi items"**: Multiple entries/all menu icons are shown on one screen at a time.
- **"Single item"**: An entry/a menu icon is shown on one screen in large characters at a time.

The default setting is **"Multi items"**.

1 [MENU] (center of joystick) → **[#][1][9][2]**

2 [▼]/[▲]: Select the desired setting. → **[SAVE]**

3 [OFF]

Note:

- When **[MULTI]** or **"Multi items"** is selected as the display mode, you can move screens by pushing the joystick right or left, without scrolling down or up through the list:
 - Push the joystick right to go to the next screen.
 - Push the joystick left to return to the previous screen.

Listening to messages using the handset

Listening to messages from the message list

You can select the item to play back.

1 [MENU] (center of joystick) → **[#][3][2][9]**

2 [▼]/[▲]: Select the desired item from the message list. → **[PLAY]**

- You can erase the selected message as follows: **[ERASE]** → **[▼]/[▲]**: **"Yes"** → **[SELECT]**

3 When finished, press **[OFF]**.

Note:

- If the item has already been heard, **"✓"** is displayed, even if it was heard using another handset.

- If the unit cannot receive caller information, "msg." is displayed in the message list.
- When you play a message from the message list, the playback operations are as shown below:
 - If you press **[1]** or push the joystick left, the currently playing message is played back from the beginning.
 - If you press **[2]** or push the joystick right, the unit stops message playback and the display goes back to the message list.

Operational differences for some features

The following features include different operations from the descriptions in the operating instructions. The differences are described in the boxed text.

Shared phonebook: Searching by first character (alphabetically)

1 

2 Press the dial key (**[0]** – **[9]**, **[*]**, or **[#]**) which contains the character you are searching for.

3 **[▼]/[▲]**: Scroll through the phonebook if necessary.

4 

Call block (Caller ID subscribers only): Storing unwanted callers

■ From the caller list:

1 **[MENU]** (center of joystick) → **[#][2][1][3]**

2 **[▼]/[▲]**: Select the entry to be blocked. → **[SELECT]**

- To edit the number, press **[EDIT]** repeatedly until the phone number is shown in the 10-digit format.

3 **[SAVE]**

4 **[▼]/[▲]**: "Call block" → **[SELECT]**

5 **[▼]/[▲]**: "Yes" → **[SELECT]**
→ **[OFF]**

Caller list: Editing a caller's phone number before calling back

1 **[MENU]** (center of joystick) → **[#][2][1][3]**

2 **[▼]/[▲]**: Select the desired entry. → **[SELECT]**

3 Press **[EDIT]** repeatedly until the phone number is shown in the desired format.

4 

Caller list: Storing caller information to the phonebook

1 **[MENU]** (center of joystick) → **[#][2][1][3]**

2 **[▼]/[▲]**: Select the desired entry. → **[SELECT]**

- To edit the number, press **[EDIT]** repeatedly until the phone number is shown in the desired format.

3 **[SAVE]**

4 **[▼]/[▲]**: "Phonebook" → **[SELECT]**

5 Continue from step 2, "Editing entries", in the operating instructions.